


# USER'S MANUAL Power Amplifier

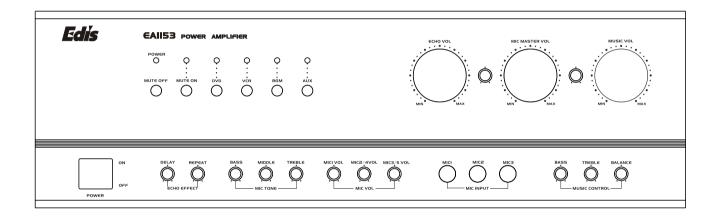

**EA1153** 



Please help to protect the environment!

Dispose of this equipment at an appropriate disposal centre.

Size: 210\*290mm

Thank you for choosing Edis products. We are confident that it will provide you with a long reliable service, but just in case you experience a problem, it is supplied with a 1-year return to base warranty.

This warranty and the product to which it relates applies to the original purchaser only and is not transferable (for the avoidance of doubt, this will be taken from the information held by the appointed national distributor at the point of sale).

The liability of the manufacturer and its appointed service company is limited to the cost of repair and or replacement of the faulty unit under warranty.

This warranty protects you against the following:

Failure of any components.

Damage when the product is first removed from its packaging if reported within 24 hours of purchase.

If you find you do have a problem with this product, you should contact the AV reseller you purchased this product from. The original purchaser is responsible for shipment of the product to the manufacturer's appointed service company for repair.

The manufacturer endeavours to replace the faulty parts of the product rather than replacing the whole unit.

This warranty does not protect this product against faults caused by abuse, misuse, incorrect installation, unstable or faulty power input, which might be caused by ignoring the guidelines set out in this guide.

#### **Contents**

1、	Contents	1
	Safety Warning	
3、	Main Features	2
	Panel Details	
5、	Indicator Light Status	4
6、	Circuit Protection	4
7、	Connection to other equipment	5
8、	Troubleshooting	5
	Main Technical Parameters	

# **Safety Warning**





To reduce the risk of electric shock, do not remove cover (or back) there are no user-serviceable parts inside. Please refer servicing to qualified service personnel. Power Supply: 230 Volt 50 Hz



The product shall be connected to a power supply only of the type described.

To reduce the risk of fire or electrical shock, do not expose this product to damp or moisture.

Unplug the product from the wall socket when it is not to be used for a long period of time.


Adequate care shall be taken so that foreign objects do not fall, or liquids are not spilled into the enclosure through openings. Do not remove the cover or back, as there are no user-serviceable parts inside.

# Main Features

- Stereo power amplifier sound system for multiple speakers in School hall etc.
- Digital amplifier with low impedance capable of connecting several speakers.
- · Includes four speaker outlets.
- 5 microphone jack inputs 3 at front and 2 at rear.
- High quality speech with echo controls.
- 4 music inputs at rear.
- · Line out.

## **Panel Details**


#### 1. Front Panel

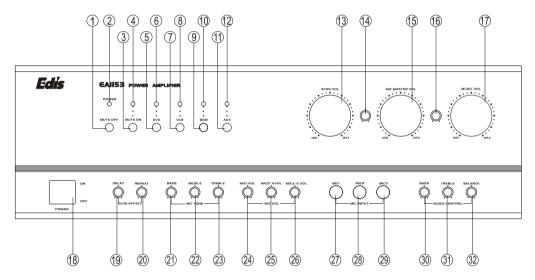

- 1、MUTE OFF
- 2、POWER
- 3、MUTE ON
- 4、MUTE ON LIGHT
- 5 DVD INPUT
- 6、DVD INPUT LIGHT
- 7、SIGNAL INPUT (VCR)
- 8、VCR LIGHT
- 9、SIGNAL INPUT (BGM)
- 10、BGM INPUT LIGHT
- 11、SIGNAL INPUT (AUX)
- 12、AUX LIGHT
- 13、ECHO VOLUME
- 14、MIC MASTER ADJUSTER
- 15、MIC MASTER VOLUME CONTROLLER
- 16、MUSIC VOLUME ADJUSTER

- 17、MUSIC VOLUME CONTROLLER
- 18、POWER ON/OFF
- 19、ECHO TIME CONTROLLER
- 20、ECHO REPEAT TIMES CONTROLLER
- 21、MIC SIGNAL BASS CONTROLLER
- 22、MIC MIDDLE CONTROLLER
- 23、MIC TREBLE CONTROLLER
- 24、MIC1 VOLUME CONTROLLER
- 25 \ MIC2/4 VOLME CONTROLLER
- 26、MIC3/5 VOLME CONTROLLER
- 27、MIC1 INPUT
- 28、MIC2 INPUT
- 29 MIC3 INPUT
- 30、MUSIC SIGNAL BASS CONTROLLER
- 31、MUSIC SIGNAL TREBLE CONTROLLER
- 32、MUSIC SIGNAL BALANCE CONTROLLER

#### 2 Rear Function Introduction

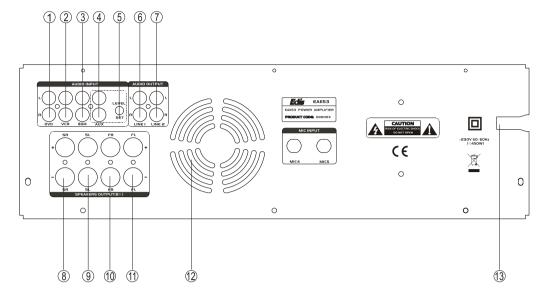

- 1, DVD IINPUT
- 2 VCR INPUT
- 3、BGM INPUT
- 4、AUX INPUT
- 5、AUX ADJUSTER
- 6、LINE 1 OUTPUT
- 7、LINE 2 OUTPUT

- 8. SURROUND RIGHT TRACK OUT(SPEAKER) TERMINAL
- 9、SURROUND LEFT TRACK OUT(SPEAKER) TERMINAL
- 10、FRONT RIGHT TRACK OUT(SPEAKER) TERMINAL
- 11、FRONT LEFT TRACK OUT(SPEAKER) TERMINAL
- 12、FAN BLOWER
- 13、AC POWER CABLE

# **Indicator Light Status**

#### 1. Red Power light

- A. Power on. The red power LED indicator flashes red 5 or 6 times before normal operation of the amplifier commences
- B. When the mute button is pressed the yellow mute LCD indicator glows and the red power light also flashes the mute light cancels when the mute function is switched off.
- C. The red power on light flashes when operation of the amplifier is interrupted for any reason by protection circuits etc.

#### 2. Yellow Mute light

Pressing the mute on button mutes the amplifier and the yellow mute LCD flashes as a warning and the red power on LCD flashes to indicate no audio output; Pressing the mute off button restores amplifier operation.

#### 3. Green Input channel lights (DVD VCR BGM AUX)

- A. At initial Power on the DVD input is chosen automatically and the green LCD shows that the DVD input is sele cted.
- B. Pressing the input buttons to select a propriate input channel a green indicator LCD light will confirm the selection.

NOTICE: ① DO NOT earth the Red speaker terminals as this will damage the amplifier.

2 Ensure that you match the amplifier with suitable speakers to avoid overload damage.

# Rear Panel Details BGM VCR AUX DVD VCR (€ Ø 0 0 0 Other audio amplifier or device

# **Circuit Protection**

The EA1153 amplifier has three circuit protection features.

RIGHT SPEAKER

## **Short circuit Protection**

A relay operates to cut output power when the speaker terminals are short circuit.

LEFT SPEAKER

The Red Power light flashes if the amplifier is muted or speaker short circuited.

#### **DC Voltage Protection**

If a DC voltage is applied to the speaker terminals a protection relay should cut the output to protect the speakers. The power on light will flash and you need to seek help from a qualified maintainer to reset

#### **Power Protection**

When the power is switched on the amplifier waits 2 seconds before connecting the speakers to avoid excessive noise

#### **Current Limit Protection**

There is a mains fuse inside the amplifier to limit over current which needs to be replaced if the fuse blows.

# Connection to other equipment

Before connecting the amplifier to any other equipment such as DVD player, tuner etc turn off the amplifier using the Power on button. then connect and turn power back on.

# **Troubleshooting**

If the amplifier is not operating correctly, disconnect the power and check the symptoms in the table below. If the problem still persists contact your supplier where the amplifier was purchased.

 
Problem	Causes	Corrections
No Sound	<ul><li>Speaker terminal loose or disconnected</li><li>Audio input disconnected</li><li>Power plug loose or disconnected</li><li>Volume control sets to minimum</li></ul>	<ul> <li>Re-connect speaker connection</li> <li>Check and re-connect audio input</li> <li>Re-connect power supply</li> <li>Turn volume control to suitable level</li> </ul>
Sound only from one channel	<ul><li>One speaker disconnected</li><li>One audio channel input disconnected</li><li>Left/right balance set to one side only</li></ul>	<ul><li>Re-connect speaker</li><li>Re-connect input</li><li>Adjust the balance setting</li></ul>

# **Main Technical Parameters**

Number	Stereo Mode ( 2 Channel )		Techinc Index	
1	Distortion limi	t output power THD≤2%	150W×2	
2	Distortion or main syntong (rating conditon)			≤1%
3	Singal - to - noise ratio (Rating condition)			≥80dB
4	Load inpendance			<b>8</b> Ω
5	Input inpendance			≥20KΩ
6	Input sensitivi	ty		130mV
7	Rating electromotive force (Rating input electric level)			500mV
8	Frequency response			20Hz∼20KHz
9	Power supply			∼230V 50Hz
10				430×320×145 mm
11	)	Net weight		9.6kg
11	Weight	Gross weight		11.2kg
12	Power	Rating conditon	8Ω	450W
12	concumption	Normal work condition	8Ω	170W

NOTICE: 1. The above information is for reference only .

2. The amplifier specifications may be changed without prior notice.



**MODEL NO.: EA1153** © 2011 Edis Trading (HK) Limited Protected by European Community Design Rights UMA0575A