




APP Operation Manual

1. APP Download and Installation

1.1 iPhone/Android phone: Scan below QR code and select "Browser" to open it.



- 1.2 iPhone will jump to the corresponding page of "App Store" automatically, click "Obtain" to download and install.
- 1.3 If the browser of the Android phone does not jump to the download page automatically, you can manually click "Other" button below to enter the corresponding download page. Click "Install" button below to download and install.

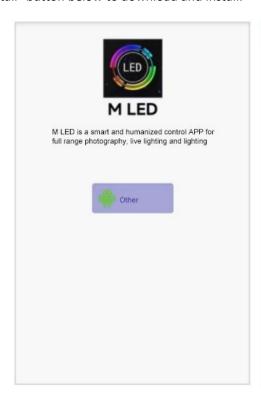




2.Interface Introduction

2.1 Select Interface:



As shown in the picture, this App is mainly used in two categories of products currently, "warm and cold photographic light" and "full-color photographic light". In this interface, you can select the corresponding function control page according to the actual product type.

2.2 Cold and warm photographic light interface:

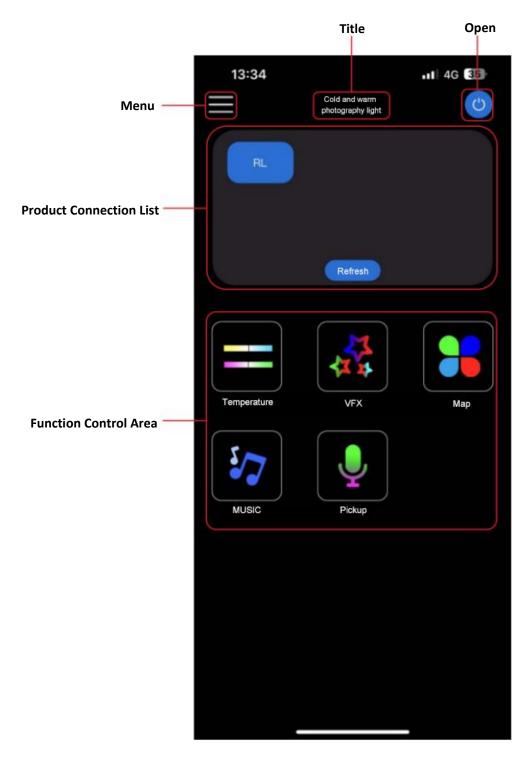

Menu: Click and the App menu will display.

Title: Show product type of the current page.

Open: Turn on/turn off for the connected products.

Product Connection List: Product name which can be connected nearby will be displayed here. Click the corresponding product name to match connection. The connected product name will be turned into blue background.

Functional Control Area: Adjust and control the connected products.

2.3 Full color photographic light interface:



Menu: Click and the App menu will display. **Title**: Show product type of the current page.

Open: Turn on/turn off for the connected products.

Product Connection List: Product name which can be connected nearby will be displayed here. Click the corresponding product name to match connection. The connected product name will be turned into blue background.

Functional Control Area: Adjust and control the connected products.

2.4 App Menu:



Firmware Upgrade: The product firmware can be upgraded wirelessly.

Help: Click to open App Help.

Software Version: Display the current App software version.


3. Function/Operation Instruction

3.1 Function/operation instructions of Cold/Warm photographic light:



Correlated Color Temperature (CCT)

- --Adjust the CCT and brightness parameters manually.
- --8 preset scenes for selection in the App.
- --Save the manually adjusted parameters as custom scenes.

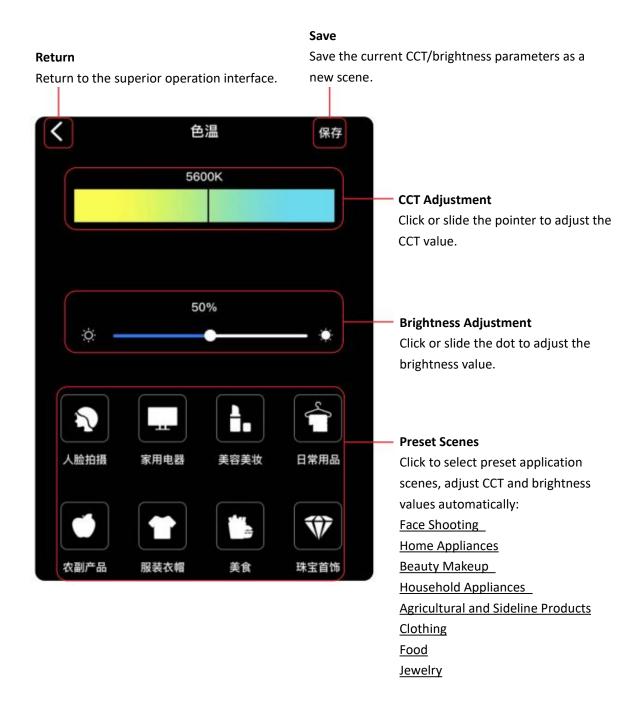




Special Effects

--App presets 10 special effects lighting modes for choice.

Return

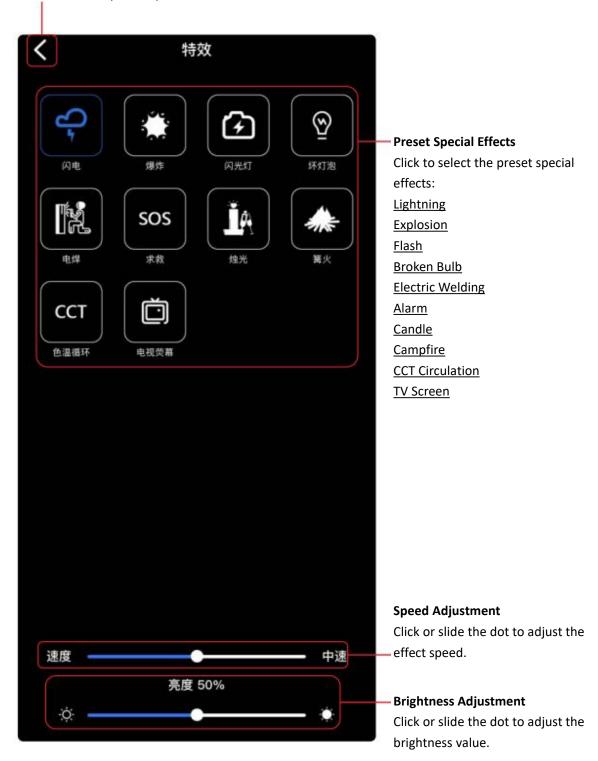



Scene

- --Create new scenes and save them.
- --Select apply, rename, delete from the saved scenes.

Return Return to the superior operation interface. Scene Scene List Here is a list of saved scenes. Click to apply the corresponding CCT and brightness value.






Music

--Play the local music in phone, light moving with the music.

Return

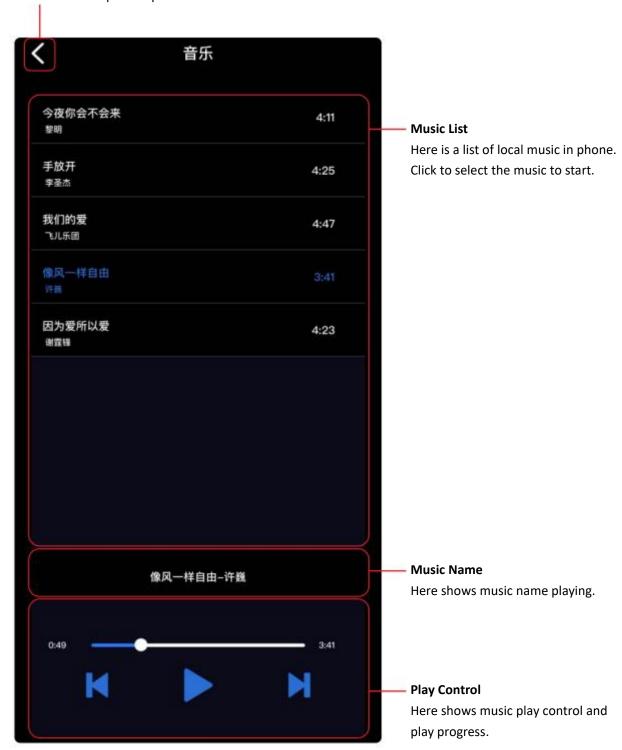




Pickup

--Use mobile phone Mic, to pick up sound and the light moving with the sound.

Return

Return to the superior operation interface.

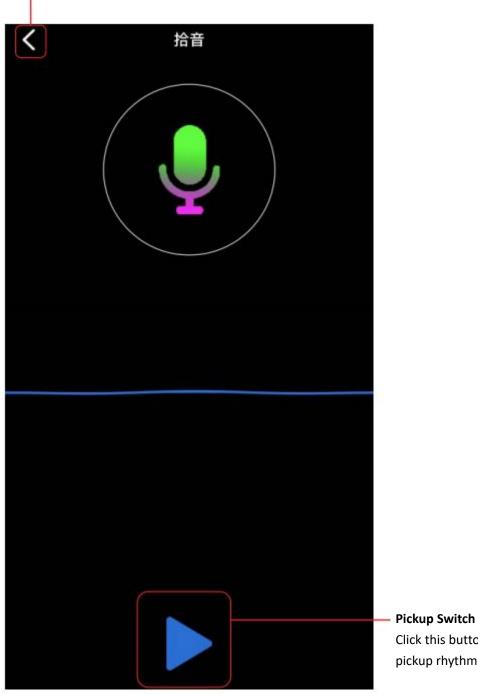

Click this button to start/pause the pickup rhythm function.


3. Function/Operation Instruction

3.2 Function/operation instruction of Full-Color photographic light:




Correlated Color Temperature (CCT)

- --Adjust the CCT and brightness parameters manually.
- --8 preset scenes for selection.
- --Save the manually adjusted parameters as custom scenes.

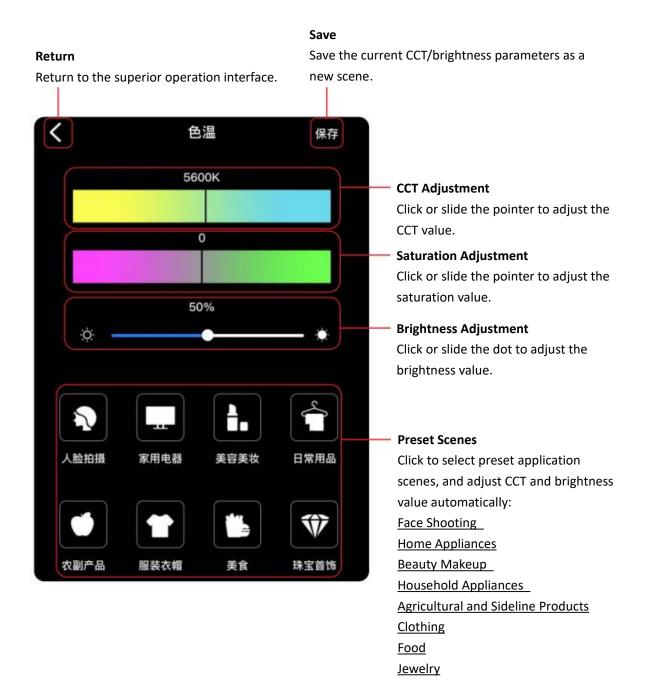



Return

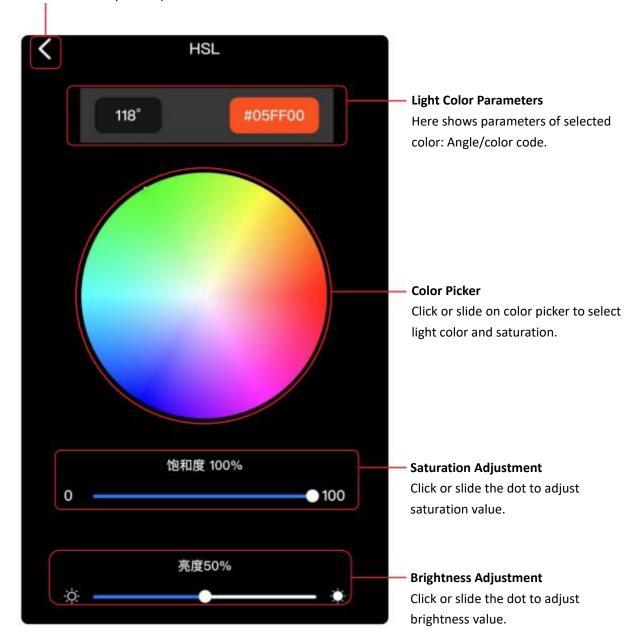




RGBWY Mode Dimmer

--Dim in RGBWY 5-in-1 mode.

Return

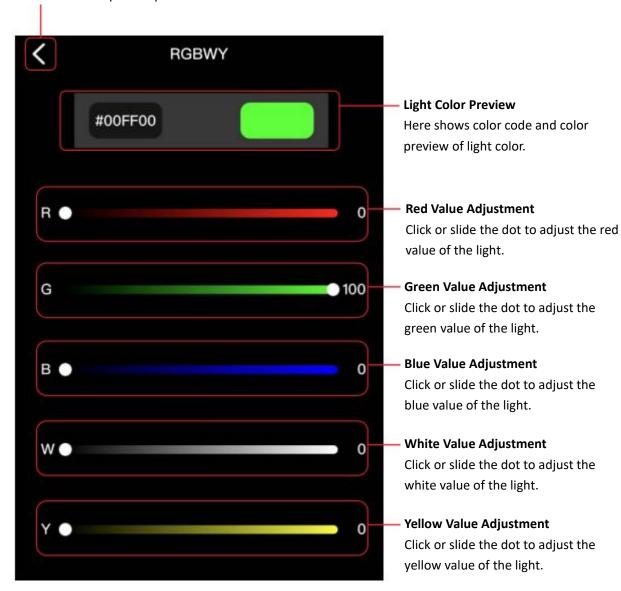



Color Card Preset

--Select light color according to the preset color card in App.

Return






Special Effects

--App preset 10 CCT (warm and cold lights) special effects lighting modes, and 26 RGB (full color light) special effects lighting color modes for choice.

Return

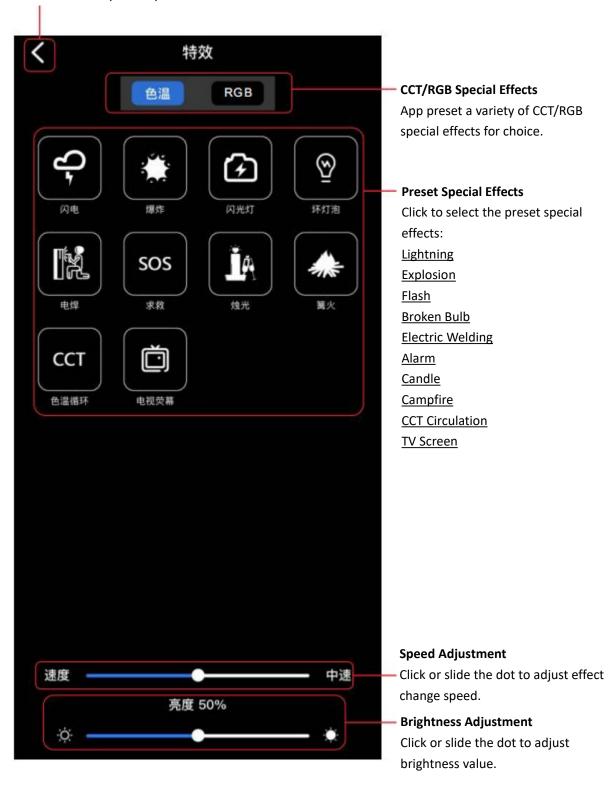




Special Effects

--App preset 10 CCT (warm and cold lights) special effects lighting modes and 26 RGB (full color light) special effects lighting color modes for choice.

Return

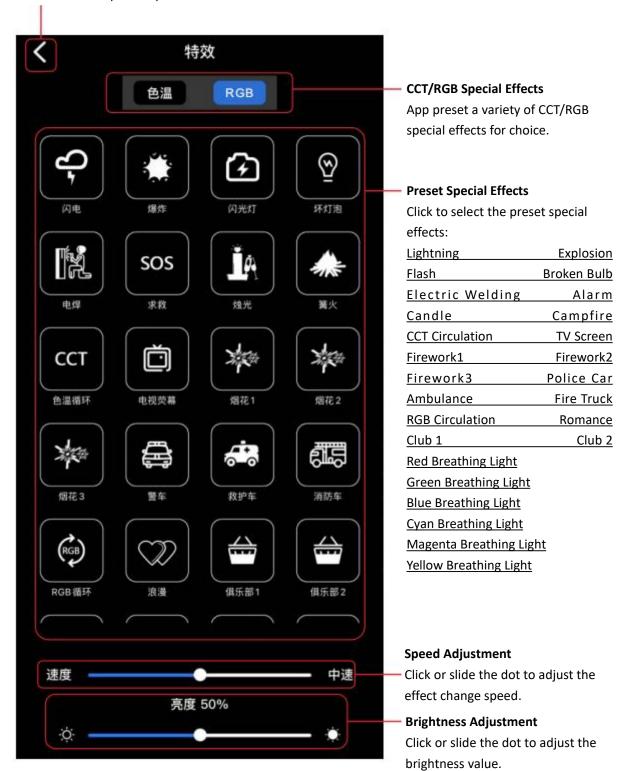




Color Picker

--App uses phone camera to take colors from real objects or local photos of phone, and applies it to the lighting color in real time.

Return

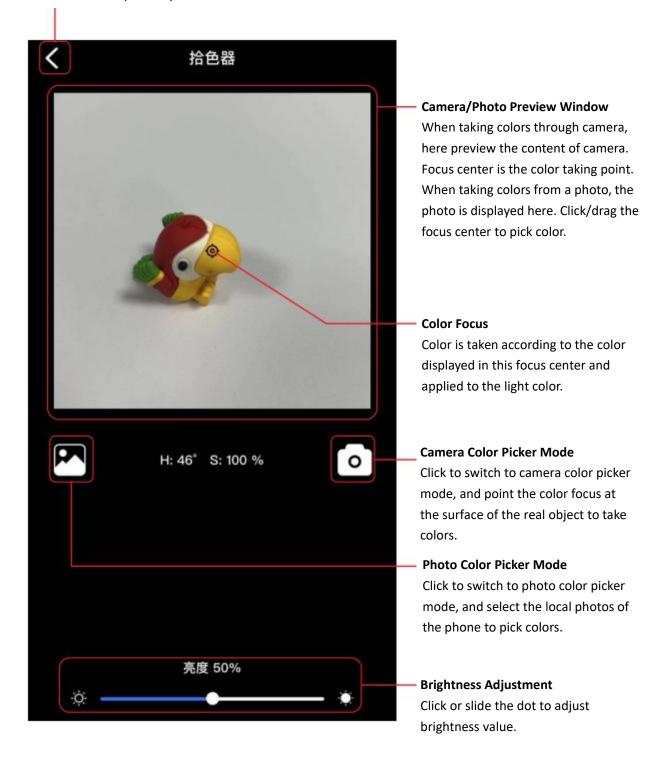




Music

--Play local music in phone, light moving with the music.


Return

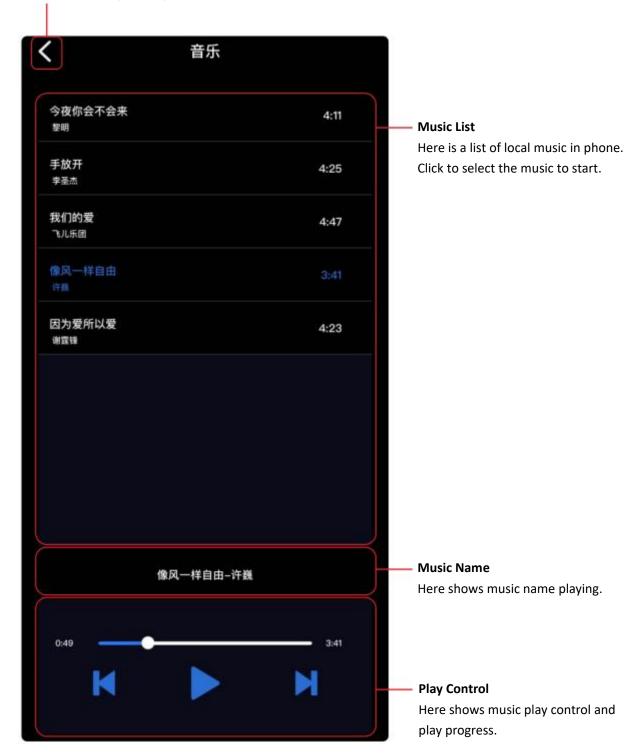



Scene

- --Create new scenes and save them.
- --Select apply, rename, and delete from the saved scenes.

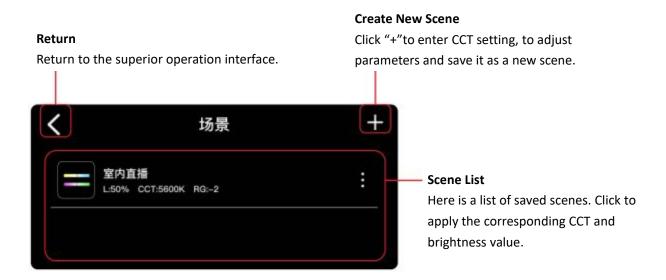






Pickup

--Use phone Mic to pick up sound and the light moving with the sound.

Return

Return to the superior operation interface.

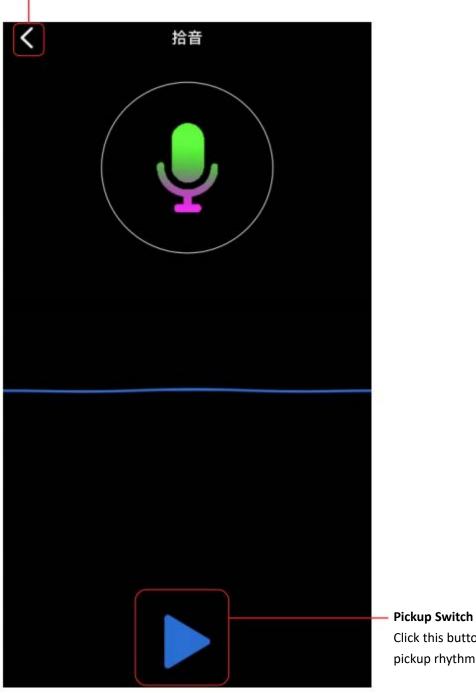

Click this button to start/pause the pickup rhythm function.